


MODEL: BB-100

Single Wheel
Brick Barrow

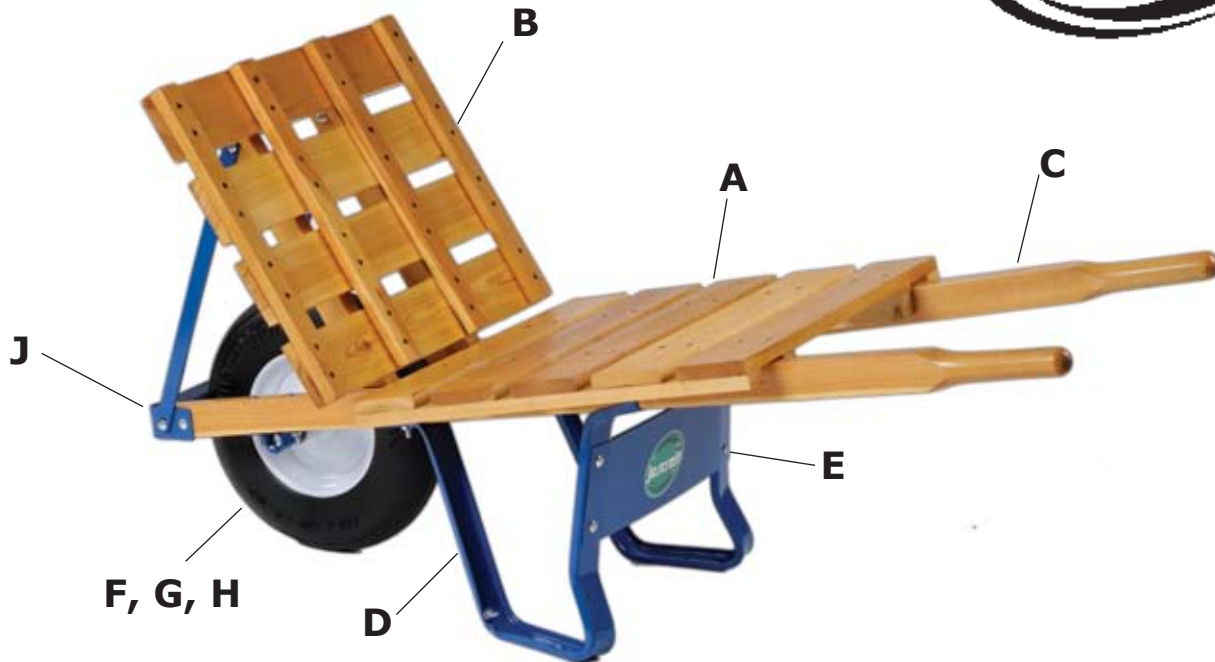

ITEM	DESCRIPTION	QTY
A	HARDWOOD SLAT PLATFORM BED	1 PC
B	HARDWOOD SLAT DASH	1 PC
C	HARDWOOD HANDLES, LEFT & RIGHT	2 PCS
D	STEEL LEGS, LEFT & RIGHT	2 PCS
E	STEEL BRACE PLATE	1 PC
F	TIRE & WHEEL ASSEMBLY	2 PCS
G	STEEL AXLE, 5/8 INCH DIAMETER	1 PC
H	STEEL AXLE BRACKETS, LEFT & RIGHT	2 PCS
I	STEEL NOSE GUARD	1 PC
J	STEEL DASH BRACES	2 PCS
K	SLOT BOLTS, 3 1/2" LONG	6 PCS
L	SLOT BOLTS, 2 3/4" LONG	8 PCS
M	SLOT BOLTS, 2 1/4" LONG	4 PCS
N	SLOT BOLTS, 1 3/4" LONG	2 PCS
O	SLOT BOLTS, 3/4" LONG	4 PCS
P	SERRATED LOCK NUTS	24 PCS

Assembly Instructions on Reverse Side

For assistance or missing parts contact Jescraft Customer Service at 1-800-524-1142

MODEL: BB-100



Single Wheel Brick Barrow Assembly Instructions

Tools Required: Slot Screwdriver & 1/2" Wrench or Adjustable Wrench

- 1) Attach Steel Wheel Guard(Item I) to Hardwood Handles(Item C), 2 front holes only. Note handles are marked left and right. Use 2-1/4" Slot Bolts(Item M), hand tighten only. Lock nuts should face to outside.
- 2) Insert two 2-3/4" slot bolts(Item L) in countersunk holes(located 26 inches from grip end). Place Hardwood Slat Platform Bed(Item A) upside down on a flat surface(floor is ok). Place Handle Assembly alongside Platform Bed so that holes on side of handles align with holes in Platform Bed runners. Insert four 3-1/2" slot bolts(Item K). Nuts should face outside. Make sure bolts previously inserted in countersunk holes freely protrude thru hardwood handles.
- 3) Loosely attach Steel Brace Plate(Item E) to Steel Legs(Item D), marked left and right, using four 3/4" Slot Bolts(Item O). Nuts should face inside channel. Place leg assembly on two countersunk bolts of Hardwood handles and remaining leg assembly holes. Tighten bolts and nuts.
- 4) Turn brick barrow over and install Hardwood Slat Dash(Item B) by inserting two 3-1/2" slot bolts(Item K) thru holes located on sides of Hardwood Handles. Attach Steel Dash Braces(Item J) using 2-1/4" slot bolts(Item M) to handles and 1-3/4" slot bolts(Item N) to Dash(Item B). Nuts should face outside. Tighten bolts.
- 5) Install one Axle Bracket(Item H) to underside of Hardwood Handle(Item C) using two 2-3/4" slot bolts(Item L). This is best done with the Brick Barrow in an upside down position. Hand tighten slot bolts. Protruding extension on axle bracket must face toward inside. Place Axle(Item G) thru center of Wheel Assembly(Item F) and insert into axle bracket. Attach the other axle bracket and hand tighten slot bolts. Align wheel and tighten bolts. Check the wheel for free rotation and side play. **WARNING:** It is not safe to inflate tire above 30 P.S.I. Over inflation may result in injury or death.

SLOT BOLT MEASUREMENT GUIDE

